

# Turonic L813

## AI Voice Recorder



### **USER'S MANUAL**

Please read this manual  
before using the product



Scan to see the latest  
version of the manual






## **THANK YOU FOR CHOOSING TURONIC L813!**

TURONIC L813 is an AI Voice Recorder with ultra-sensitive microphones capable to record the voice, as well as phone calls, and turn them into a text or comprehensive summary, and many more.


## WHAT'S IN THE BOX

1. Voice recorder
2. USB Type-A to USB Type-C cable
3. USB Type-A to USB Type-C adapter
4. Magnetic ring \*
5. User's manual

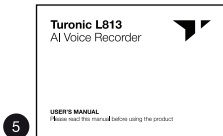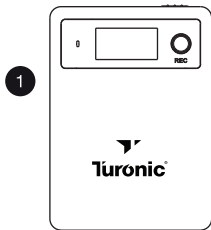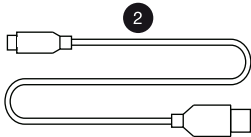

\* The magnetic ring is used to attach the recorder to the devices non-equipped with magnets. Just remove the protective layer from the adhesive side (white) and apply the ring to the desired location.

## CONTROLS AND INDICATION

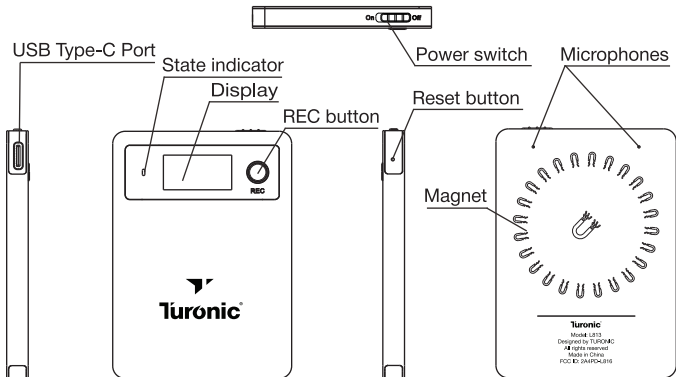

## RECORDER FUNCTIONS

<b>Function</b>	<b>Operation</b>
<b>Power on</b>	Set the Power switch to the On position.
<b>Power off</b>	Set the Power switch to the Off position.
<b>Turn on the screen</b>	When the recorder went to sleep (after 10 seconds of inactivity), press the REC button.
<b>Start recording</b>	Press and hold the REC button for 1 second while being in a stand-by mode.
<b>Stop recording/ save file</b>	Press and hold the REC button for 1 second while recording.
<b>Hard reset</b>	Press the Reset button on the right side of the recorder.

## HOW TO START

1. Download and install the APP by scanning the QR code below according to your device's operating system.






For Android





For iOS

2. Open the app and register a new account or login with Google.

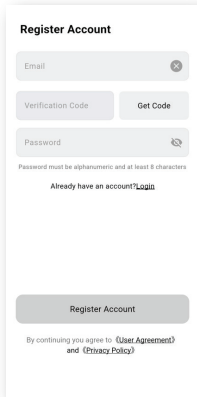
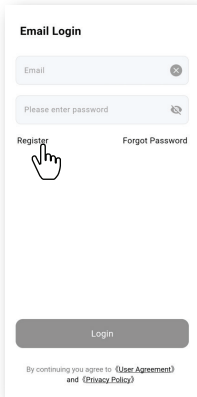
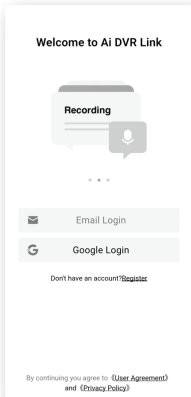


3. Set the Power switch on the top of the recorder to the On position. The screen will light up and the blue state indicator will start blinking, indicating that the recorder is in the pairing mode.

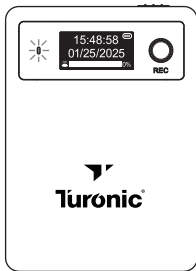


**NOTE:** If the recorder is turned, is **not connected** to any device and idles for 10 minutes, it will turn off automatically to save the battery. To turn it back on, set the Power switch to the Off position and return it back to the On position.

4. In the APP, tap the Connect button, give all the required permissions to the APP and select the L813 model by tapping Connect the device.

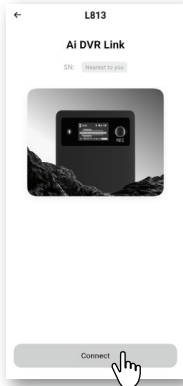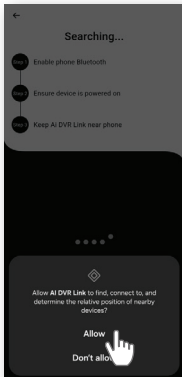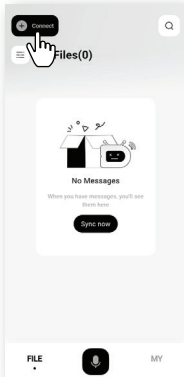

5) Once connected, you will see the Connected icon in the left top corner. If there are already some files in the recorder, they will be displayed on this screen as well.



**NOTE:** The interface language follows the language of the device. In case the device language is not supported by the APP, the app interface may switch to Chinese. To select English, tap the right icon (next to the microphone one) in the right bottom corner (1), select the second last option with the little arrow (2), select English (3) and tap the green button below to confirm (4).

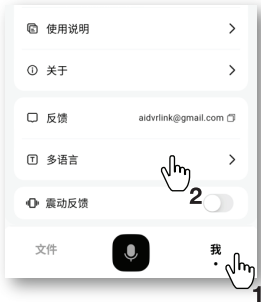

## UNBIND THE DEVICE




You can connect your TURONIC L813 recorder to any device supporting the AI DVR Link APP. However, if the recorder has been already used with one device, before binding it to another one, you need to unbind it from the first one, otherwise the recorder will fail to bind.

To unbind the recorder, from the Files section, tap the Connected icon in the left top corner. In the opened screen, tap Unbind and confirm your decision.

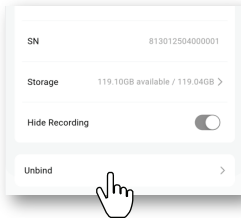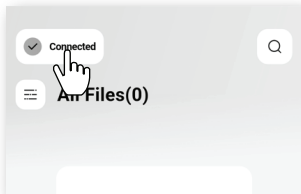


## RECORDING

1. To start recording, either press and hold the REC button on the recorder for 1 second (when the screen is on) or tap the REC button in the APP and select Start recording.
2. To stop the recording process and save the file, press and hold the REC button on the recorder for 1 second (when the screen is on) or tap the Save button in the APP.

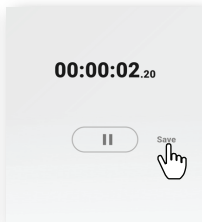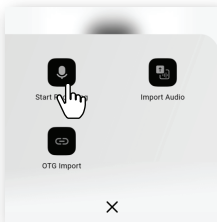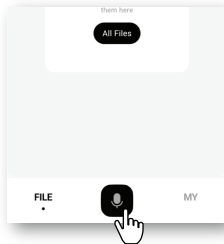


3. To pause and resume the recording process, either click the REC button on the recorder or tap the Pause/Play button in the APP.

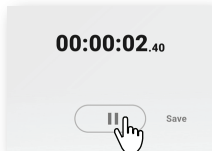

## SYNCHRONIZATION OF THE RECORDINGS

1. To import the recording into the APP, tap the Download button on the bottom right corner of the recording bubble.

2. When the recording is successfully transferred, the Download button will disappear.

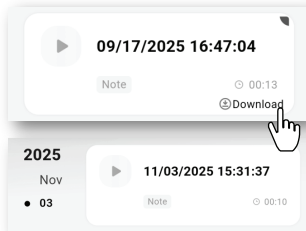


## RECORDING PLAYBACK AND EDITING

When the recording is imported, you can play it back in the APP (using the source device's speaker) or crop the required section of the recording.



1. To play or pause the recording, tap the Play/Pause button in the APP.



2. To change the speed of the playback, tap the Speed button and select the required speed.


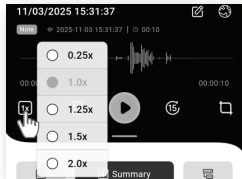


3. To crop the required section of the recording, tap the Crop button, select the required section and decide, whether to crop everything, except for the selected section (1), or remove the selected section keeping everything else (2).

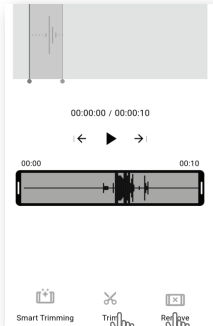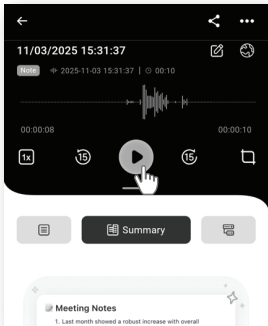


## TRANSCRIPTION/SUMMARIZING


1. When the recording is imported, tap on it to open the Summary screen.
2. To start the transcription process and see the summary, tap the Summary button, select the summary template, recording language, AI model and tap Generate immediately.

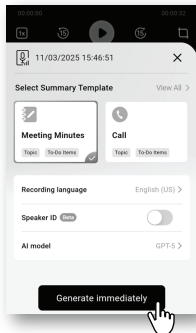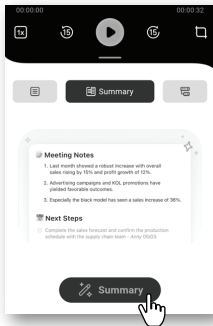


3. Once the summarizing is done, you can switch between the Summary, Transcription (1) and Mind-map (2) views by tapping the respective buttons.




4. To rename the recording, tap the Edit button and enter the desired file name.

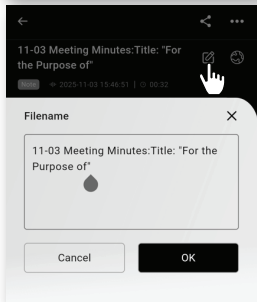

5. In case you want to change the transcription/summarizing language or summary structure preset, tap the 3-dot button and select the required action.

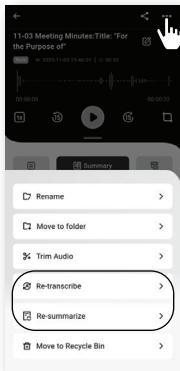


6. Also, now you can export either the recording transcription/summary or the recording itself by tapping the Export icon in the right top corner and selecting the required action to do.

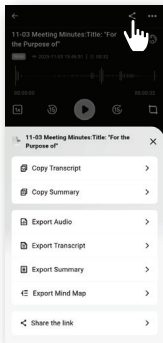

## DELETE/RECOVER THE RECORDINGS




You can either move the recording to the Recycle bin (in such case, the recording will still be available on the recorder itself) or permanently remove the recording.

1) To move the recording to the Recycle bin, swipe any recording to the left, select the recording to be deleted and tap Delete.

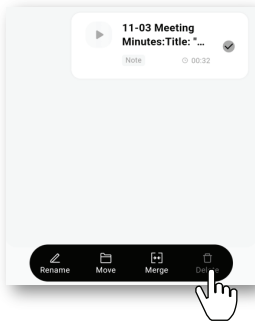

2) To permanently remove the recording, from the files list, tap the 3-line button, select the Recycle bin, then swipe any recording to the left, select the recording to be deleted and tap Delete (1).

3) To recover the recording, from the files list, tap the 3-line button, select the Recycle bin, then swipe any recording to the left, select the recording to be recovered and tap Recover (2).

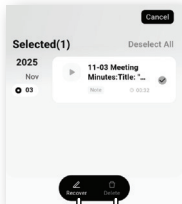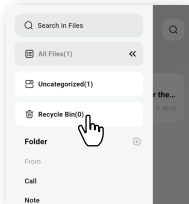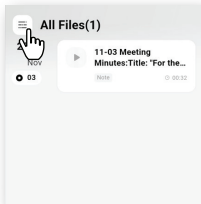


## TRANSCRIPTION/SUMMARIZING TIME

After you activate your account and connect the new recorder, by default, you get 400 minutes/month of free transcription and summarizing time.

However, within the first year of use, the TURONIC customers are entitled to additional 400 minutes/month, making 800 minutes/month in total. To claim these additional 400 minutes/month, contact the Support Team via [support@turistic.com](mailto:support@turistic.com) providing your order number, account email address and the serial number of the recorder.

In case the provided free 800 minutes/month are still not enough for you, you can always purchase additional minutes via the app. To see the available packages, from the Me section, tap the Remaining transcription time option and select the required package to purchase.

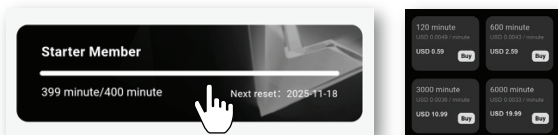

\* The subscription cost can be revised and may not correspond to the picture above. Please check the precise cost in the latest version of the APP.

## CHARGING

You can check the current battery level of the recorder by looking at the battery level indicator on the recorder's screen.

Once the battery is running low, the state indicator will start blinking red every 5 seconds.

To charge the recorder, connect the USB Type-C side of the supplied cable into the charging port on the left side of the recorder and another side (either directly or using the supplied USB Type-A to USB Type-C adapter) into the power source. You will see the red state indicator blinking quickly on the front panel of the recorder. Once the recorder is charged, the red state indicator will become steady. It takes up to 3 hours to charge the recorder.

Be sure to use a 5 V DC, 0.5-2 A adapter or charger. Using a power source with lower power will increase the overall charging time.

Unplug the L813 recorder from the charging cable and the cable from the power source when not in use.


If left unused, a fully charged battery will lose its charge over time. We recommend charging TURONIC L813 fully at least twice a month to maintain sufficient battery life.

**NOTE:** If you are using a laptop or any other source device to charge the recorder, once you connect the recorder to the device, you will see the File Transfer and Charge Only options on the recorder screen. Select the Charge Only option (should be highlighted in red) by clicking the REC button once and wait for 5 seconds for the selected option to be confirmed.

## TRANSFER RECORDINGS TO PC

To transfer recordings to PC, connect the USB Type-C side of the supplied cable into the charging port on the left side of the recorder and another side (either directly or using the supplied USB Type-A to USB Type-C adapter) into the computer.

Once you connect the recorder to the computer, you will see the File Transfer and Charge Only options on the recorder screen. Stay on the File Transfer option (should be highlighted in red) and wait for 5 seconds for the selected option to be confirmed.



## SAFETY RULES

- Don't disassemble or modify the recorder for any reason. Doing this may cause it to malfunction or explode. The damage to your recorder can void the manufacturer's warranty.
- Make sure TURONIC L813 is completely dry before charging. Charging a wet recorder may cause serious damage.
- Clean only with a dry cloth.
- Avoid exposing TURONIC L813 to extreme temperatures (below 37°F / 3°C or above 112°F / 45°C). Extreme temperatures can cause deformation of L813 components, and reduce the battery life and the lifespan of the recorder.

## TROUBLESHOOTING

<b>Problem</b>	<b>Solution</b>
<b>Not powering on</b>	Make sure the TURONIC L813 is fully charged. Charge for 3 hours, if necessary.
<b>Cannot be found in the APP</b>	<p>Make sure that the recorder is on and in Pairing mode (the blue state indicator is blinking).</p> <p>Make sure that the wireless communication feature is enabled on the source device and all the required permissions are granted to the APP.</p> <p>Try restarting the recorder and the source device.</p>
<b>When connecting, the recorder says that need to unbind from the previous device</b>	<p>Unbind the recorder from the previous device following the instructions from the UNBIND THE DEVICE section in this manual.</p> <p>In case the recorder shows this error out of the box, please contact our support team at <a href="mailto:support@turistic.com">support@turistic.com</a>.</p>

## TROUBLESHOOTING

Problem	Solution
<b>Cannot transfer files to a PC</b>	Make sure you are using the USB Type-C cable that supports data transfer. Regular charging cables do not support the data transfer. Make sure that you selected the File Transfer option (should be highlighted in red) on the recorder screen after connecting to the computer.

## FCC STATEMENTS

### FCC COMPLIANCE STATEMENT - PART 15

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## **FCC STATEMENTS**

### **FCC INTERFERENCE STATEMENT - PART 15**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

### **RF EXPOSURE INFORMATION**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator & your body.

## RECYCLING

The recorders can be recycled, and they should be In order to keep our planet clean.  
Where should you bring them?

In the US, there is a couple of options:

<https://www.call2recycle.org>

<https://search.earth911.com>

<https://recyclenation.com/find>

<https://www.cta.tech/Consumer-Resources/Greener-Gadgets>

In Canada, please visit the following websites:

<https://www.return-it.ca/electronics/>

<https://www.call2recycle.ca/>

In the UK, please visit the links below for help:

<https://www.recycle-more.co.uk/>

<https://www.recyclenow.com/local-recycling>

## SPECIFICATION

<b>Display:</b>	160 x 80, TFT
<b>Battery:</b>	Rechargeable, 750 mAh, 3.7 V
<b>Charging time:</b>	3 hours
<b>Charging/data port:</b>	Type-C
<b>Memory:</b>	128 GB
<b>Size:</b>	79.5 x 58 x 7 mm / 3.13 x 2.28 x 0.27 inch
<b>Weight:</b>	52.7 g / 0.12 lbs / 1.86 oz

## THANK YOU

We truly appreciate that you chose TURONIC as your trusted brand of AI voice recorders. Our team sincerely hopes you enjoy the seamless usability TURONIC L813 provides. We love making our customers happy by providing true value to our products. If for any reason you are not completely satisfied with your purchase or have any questions, please let us know via [support@turonic.com](mailto:support@turonic.com). We care about our customers above all and are always here to serve you.

## 1-YEAR LIMITED WARRANTY

Please visit [turonic.com](http://turonic.com)  
to register YOUR product.  
Designed by Productech in the U.S.  
email: [support@turonic.com](mailto:support@turonic.com)

Made in China



WARNING: This product can expose you to Bisphenol A, which is known to the State of California to cause cancer. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)



**Turonic**<sup>®</sup>  
AI Voice  
Recorder  
**L813**



